











Items		Frequency *1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line				I		I		I		-	
	Throttle Operation				I		I		I		100	
	Air Cleaner *2					R			R		79	
	Spark Plug		Every 16,000 mi (25,600 km) : I Every 32,000 mi (51,200 km) : R									-
	Valve Clearance								I		-	
	Engine Oil		R		R		R		R	1 Year	85	
	Engine Oil Filter		R				R				85	
	Engine Idle Speed				I		I		I		-	
	Radiator Coolant *4				I		I		I	3 Years	87	
	Cooling System				I		I		I		-	
	Secondary Air Supply System						I				-	
Evaporative Emission Control System *3						I				-		

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 142).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

L : Lubricate

R : Replace