

Battery Cover

■ Removal

1. Open the seat. ➔ P. 30
2. Remove the screw.
3. Remove the battery cover.

■ Installation

Install the parts in the reverse order of removal.

