


## Starting the Engine *(Continued)*

### If you cannot start the engine:

With the throttle slightly open (about 1/8 in (3 mm), without freeplay) while starting the engine.

**About 1/8 in (3 mm), without freeplay**

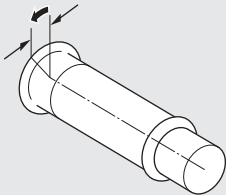

### If the engine does not start:

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying steps ① & ② again.

**If Engine Will Not Start** ➔ P.93