

## Engine Oil ► Changing Engine Oil & Filter

8. Install the oil filter spring into the oil filter cover, and then install the new gasket and oil filter cover by tightening the oil filter cover bolts.

**Torque:** 9 lbf-ft (12 N·m, 1.2 kgf·m)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf-ft (24 N·m, 2.4 kgf·m)

10. Fill the crankcase with the recommended oil (► P. 53, ► P. 134) and install the oil fill cap.

### Required oil

#### When changing oil & engine oil filter:

1.6 US qt (1.5 L)

#### When changing oil only:

1.5 US qt (1.4 L)

11. Check the oil level. ► P. 69

12. Check that there are no oil leaks.

### NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

