


Instruments *(Continued)*

3 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.


- 1 Press SEL button. The brightness is switched.

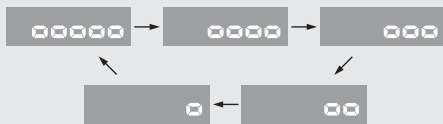

- 2 Press SET button. The backlight is set, and then the display moves the changing of the speed and mileage unit.

4 Changing of speed and mileage unit:

- 1 Press SEL button to select either "mph" and "mile" or "km/h" and "km".

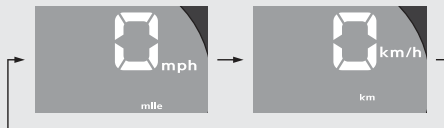

- 2 When the "km/h" for speed and "km" for mileage are selected

Press SET button. The speed and mileage unit is set, and then the display moves to the changing of fuel mileage meter unit.

When the "mph" for speed and "mile" for mileage are selected

Press SET button. The speed and mileage unit is set, and then the display returns to the ordinary display.