

Check the following items at regular intervals:

- Oil level is between the upper and lower level marks. ➤ P. 68
- Brake fluid level is
Front: above the LOWER level mark. ➤ P. 76
Rear: between the UPPER and LOWER level marks. ➤ P. 76
- Engine coolant level is between the UPPER and LOWER level marks. ➤ P. 74
- Side stand functions properly. ➤ P. 79