


Odometer [TOTAL] & Tripmeter [TRIP A/B] & Current fuel mileage & Average fuel mileage [AVG A/B] **▶P.16**

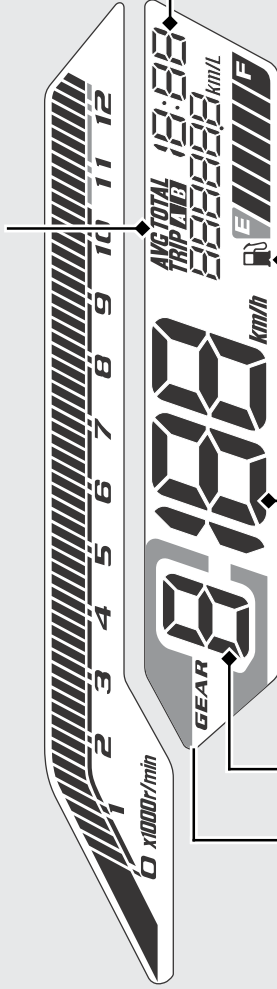

Clock (12-hour display)

To set the clock: **▶P.19**

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 1.94 L (0.513 US gal, 0.427 Imp gal)



If the fuel gauge indicator flashes in a repeat pattern or turns off: **▶P.70**

Speedometer

Gear position indicator

The gear position is shown in the gear position indicator.

▶ "-" appears when the transmission is not shifted properly.