



To set the clock

- 1 Turn the ignition switch on.
- 2 Press and hold the SEL and the SET buttons until the hour digits start flashing.

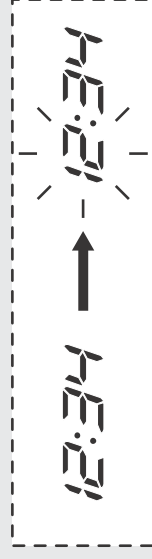


- 3 Press the SEL button until the desired hour is displayed.

- ▶ Press and hold the SEL button to advance the hour fast.

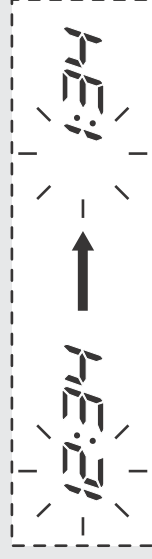


- 4 Press the SET button. The minute digits start flashing.

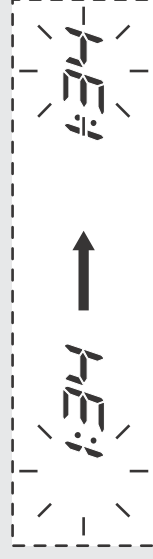

- 5 Press the SEL button until the desired minute is displayed.

- ▶ Press and hold the SEL button to advance the minute fast.

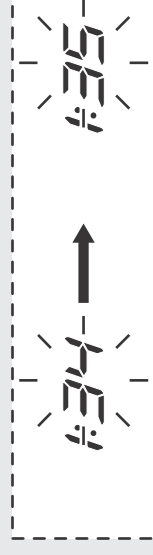

- 6 Press the SET button. The clock is set.

- ▶ The time can also be set by turning the ignition switch off.
- ▶ The display will stop flashing automatically and the adjustment will be cancelled if the button is not pressed for about 30 seconds.