



 **Left turn signal indicator**

 **High beam indicator**

 **Right turn signal indicator**

 **High coolant temperature indicator**
Comes on briefly when the ignition switch is turned to the **I** (On) position.
If it comes on while riding: 

N Neutral indicator

Comes on when the transmission is in Neutral.