
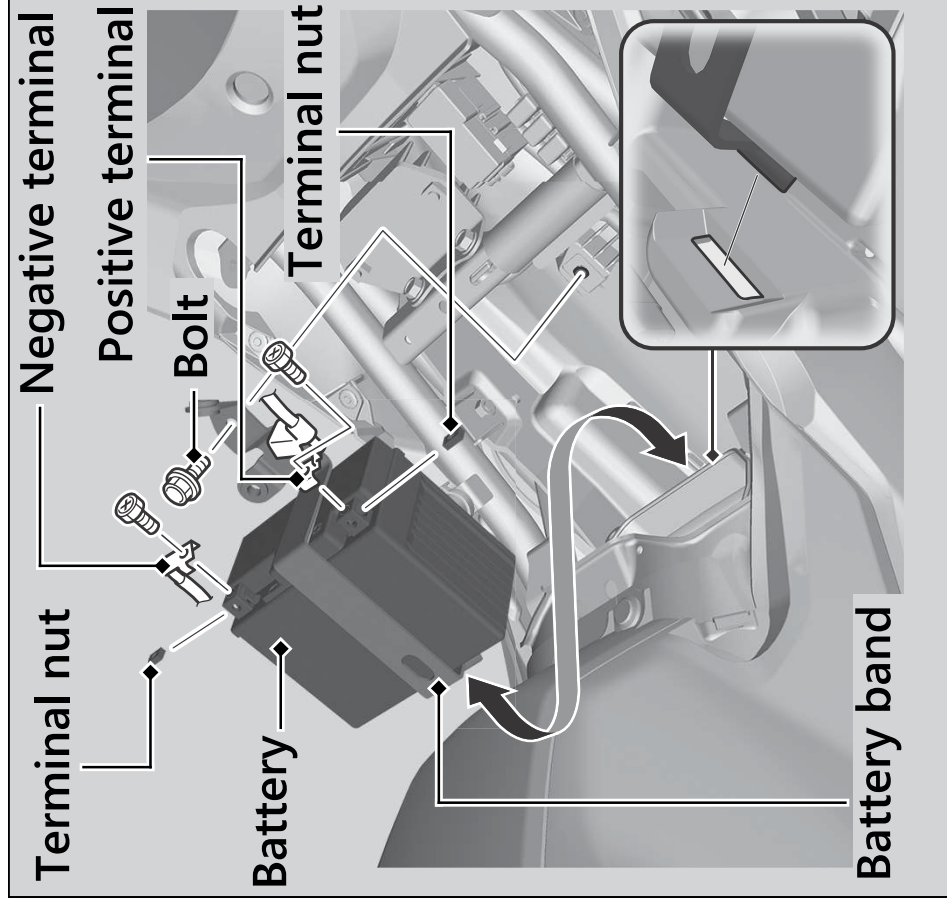


Removing & Installing Body Components

Battery

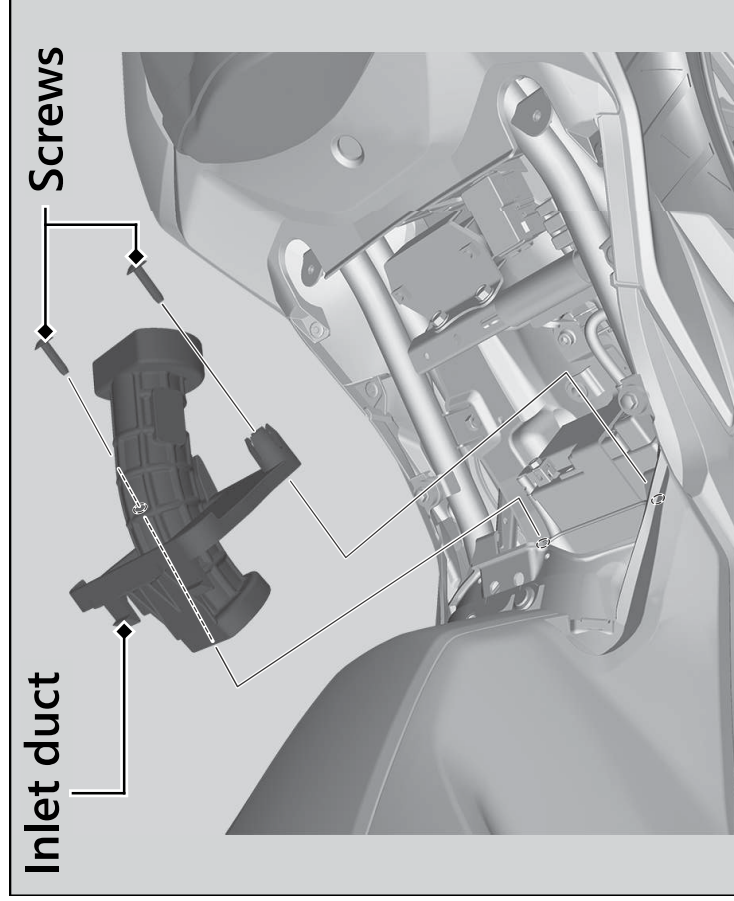

Removal

Make sure the ignition switch is in the

○ (Off) position.

1. Remove the front seat. ➔ P. 51
2. Remove the screws, and then pull the inlet duct back.