


Front Seat

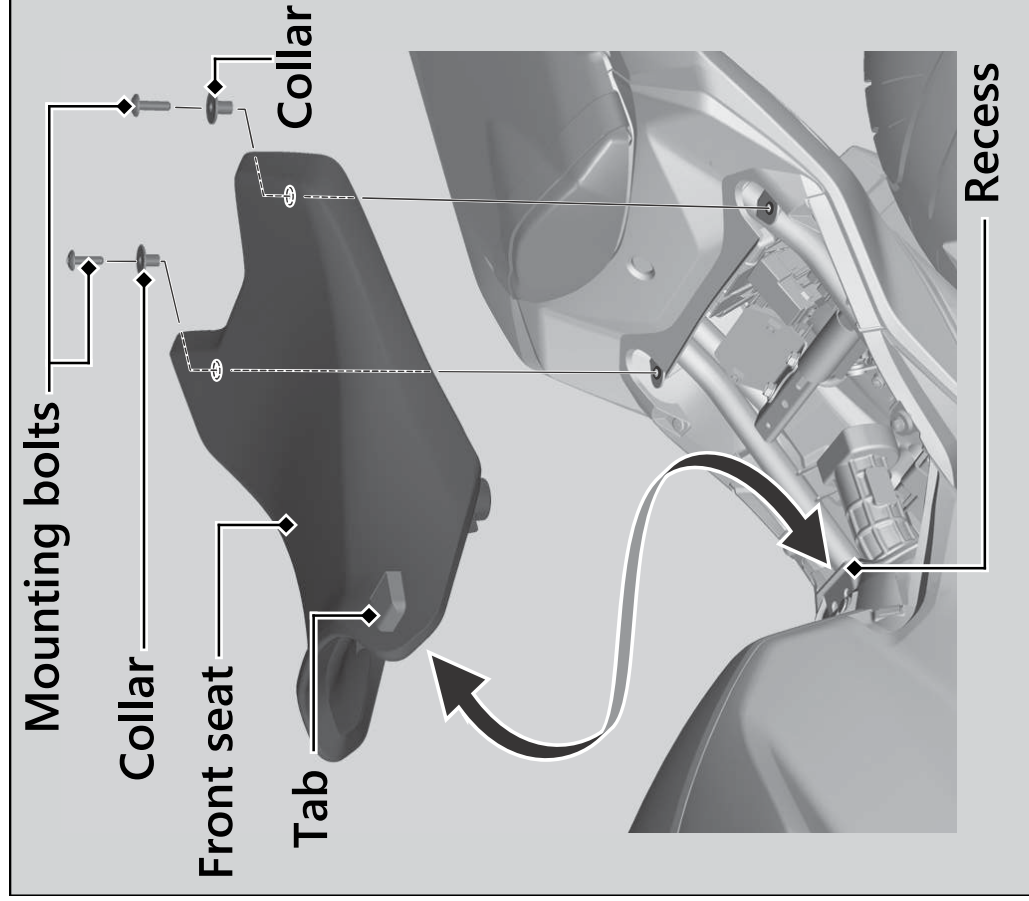

Removal

1. Pull the rear corners of the front seat up, then remove the mounting bolts and collars.
2. Pull the front seat back and up.

Installation

1. Install the front seat while inserting the tab into the recess.
2. Install the collars and mounting bolts.
3. Tighten the mounting bolts securely.

Torque: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Make sure that the seat is locked securely in position by pulling it up lightly.