

Troubleshooting

Engine Will Not Start	P. 67	Unstable Engine Operation Occurs Intermittently	P. 75
Overheating (High coolant temperature indicator is on)	P. 68		
Warning Indicators On or Flashing	P. 69		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL)	P. 69		
ABS (Anti-lock Brake System) Indicator	P. 69		
Other Warning Indications	P. 70		
Fuel Gauge Failure Indication	P. 70		
Tyre Puncture	P. 71		
Electrical Trouble	P. 72		
Battery Goes Dead	P. 72		
Burned-out Light Bulb	P. 72		
Blown Fuse	P. 73		