


## Battery

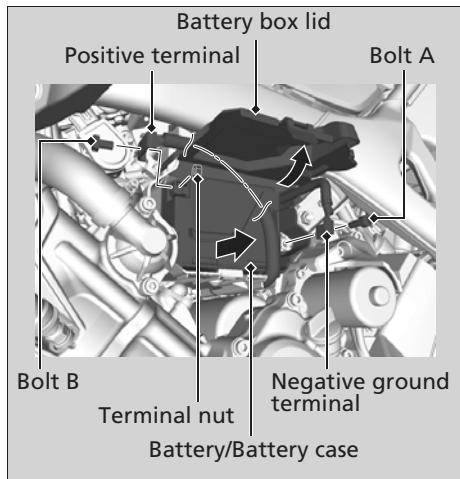

### Removal

Make sure the ignition switch is off.

1. Remove the tool box. 2 P. 101
2. Open the battery box lid.
3. Disconnect the negative - ground terminal.
4. Disconnect the positive + terminal from the battery.
  - u Make sure that the negative - ground terminal does not touch the surrounding metal parts while disconnecting the positive + terminal.
5. Pull the battery/battery case out taking care not to drop the terminal nut.