

Troubleshooting

Engine Will Not Start	P. 136	If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 141
Overheating (High coolant temperature indicator is on)	P. 137	Other Warning Indications	P. 142
Warning Indicators On or Flashing	P. 138	Fuel Gauge Failure Indication.....	P. 142
Low Oil Pressure Indicator	P. 138	Coolant Temperature Gauge Failure Indication	P. 142
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL).....	P. 138	Tire Puncture	P. 143
ABS (Anti-lock Brake System) Indicator	P. 139	Electrical Trouble	P. 151
Torque Control Indicator.....	P. 140	Battery Goes Dead	P. 151
		Burned-out Light Bulb	P. 151
		Blown Fuse.....	P. 154