## **Instruments** (Continued)

## **Display Setting**

You can adjust the display settings.

- Time format setting
- Clock setting
- Backlight brightness adjustment
- Changing the speed and mileage unit
- Changing the temperature gauge unit
- Changing the fuel mileage meter unit
- Setting the subtraction trip
- Press and hold the **SEL** (up) or the **SEL** (down) button and the **MODE** button
- Press the **MODE** button

