Riding mode (Continued)

Torque Control level:

Torque Control level has eight setting levels.

Available setting range: 0 to 7

- u Level 1 is the minimum Torque Control level.
- u Level 7 is the maximum Torque Control level.
- u Level 0 deactivates the Torque Control.