



8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install the new oil filter and tighten.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf·m)

10. Install new sealing washers onto the drain bolts. Tighten the drain bolts.

Torque: 22 lbf-ft (30 N·m, 3.1 kgf·m)

11. Fill the crankcase with the recommended oil (2 P. 100, 2 P. 199) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

CRF1000A/A II

4.2 US qt (4.0 L)

CRF1000D/D II

4.4 US qt (4.2 L)

When changing oil only:

CRF1000A/A II

4.1 US qt (3.9 L)

CRF1000D/D II

4.2 US qt (4.0 L)

12. Check the oil level. 2 P. 118
13. Check that there are no oil leaks.
14. Install the skid plate. 2 P. 114