


## FI Fuse & ABS FSR Fuse

CRF1000A/A II

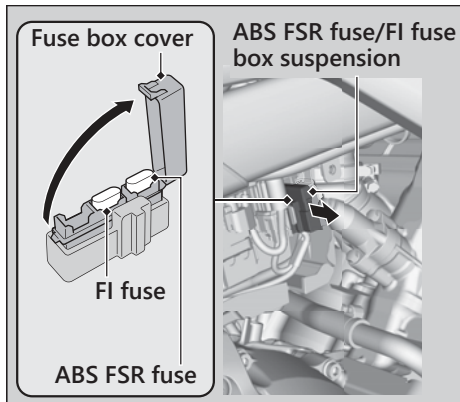

1. Remove the battery box cover. 2 P. 109
2. Pull the ABS FSR fuse/FI fuse box suspension out.
3. Open the fuse box cover.
4. Pull the ABS FSR fuse and FI fuse out with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - u Spare FI fuse is provided in the fuse box under the front seat.
  - u Spare ABS FSR fuse is provided in the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.