


Instruments *(Continued)*

Display Setting

You can adjust the display settings.

- Clock setting
- Backlight brightness adjustment
- Changing the speed and mileage unit
- Changing the air temperature gauge unit
- Changing the fuel mileage meter unit
- Setting the subtraction trip

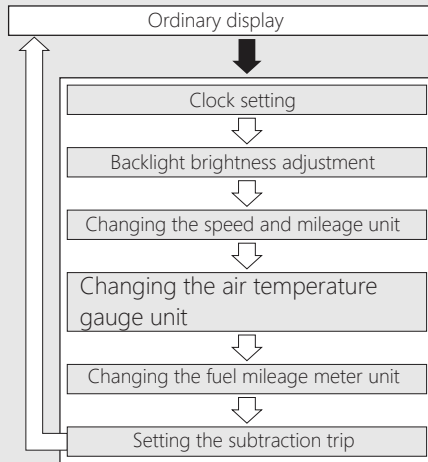

➡ Press and hold the ▼ (down) button and the **SET** button

➡ Press the **SET** button