

Shifting Gears *(Continued)*

Neutral (N): Neutral is selected automatically when you turn the ignition switch to the ON position.

If neutral is not selected when you turn the ignition switch to the ON position.

- u Turn the ignition switch to the OFF position and then to the ON position again.
- u If neutral is still not selected after turning the ignition switch to the OFF position, and then to the ON position again. ➔ **P.141**

You may hear (click) noises when the transmission shifts to Neutral (N). This is normal.

When you can change between N and D

- u Motorcycle is stopped and the engine is idling.
- u Throttle is completely closed. It is not possible to change from Neutral to D mode while the throttle is applied.
- u You cannot change between N and D mode while the wheels are rotating.
- u Side stand is raised.

NOTICE

To prevent clutch damage, do not use the throttle to keep the motorcycle stopped uphill.