


## Battery

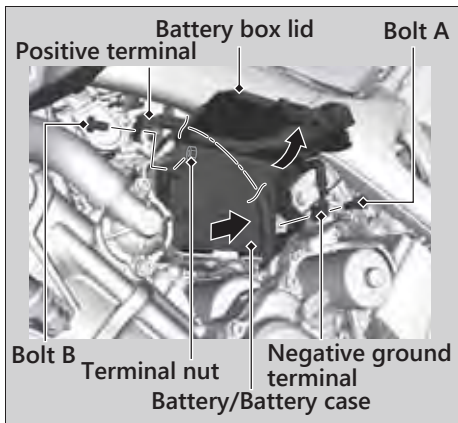

### Removal

Make sure the ignition switch is in the OFF position.

1. Remove the tool box. 2 P. 101
2. Open the battery box lid.
3. Disconnect the negative - ground terminal.
4. Disconnect the positive + terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.
  - u Make sure that the negative - ground terminal does not touch the surrounding metal parts while disconnecting the positive + terminal.
  - u Pull out the battery and battery case together from motorcycle.