

## Clock (12-hour or 24-hour display)

To set the clock: ➡ P.39 ➡ P.40

## Gear position indicator

### CRF1000A/A II

The gear position is shown in the gear position indicator.

- ▶ “-” appears when the transmission is not shifted properly.

### CRF1000D/D II

The gear position is shown in the gear position indicator when the D, S mode or MT MODE are selected.

The indicator may flash if:

- ▶ The front wheel leaves the ground.
- ▶ You turn the wheel while the motorcycle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch to the OFF position, and then to the ON position again.

**If the “-” indicator is blinking in the gear position window while riding:** ➡ P.154