


 **Low oil pressure indicator**

- Comes on when the ignition switch is turned to the ON position.
- Goes off when the engine starts.

If it comes on while engine is running:  **P.151**

 **Low fuel indicator**

- Comes on briefly when the ignition switch is turned to the ON position.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 1.11 US gal (4.2 L)

If the indicator comes on and the fuel gauge indicator flashes in a repeat pattern:

 **P.155**

 **Right turn signal indicator**

Comes on briefly when the ignition switch is turned to the ON position.

 **High beam indicator**

Comes on briefly when the ignition switch is turned to the ON position.