

## Ignition Switch

Switches the electrical system on/off, locks the steering.

▶ Key can be removed when in the OFF or LOCK position.

**Steering Lock:** ➡ P.54

## Rear ABS switch

Switches the ABS function on the rear wheel on/off. ➡ P.55

## G switch

Switches the G switch on/off. ➡ P.56

## Engine stop switch/**START** button

Should normally remain in the  (Run) position.

▶ In an emergency, switch to the  (Stop) position to stop the engine.

## N-D Switch

To shift between Neutral and AT MODE. ➡ P.77

## Hazard switch

Switchable when the ignition switch is turned to the ON position.

