

Honda selectable torque control

Torque Control level (engine power control) can be selected or turned on/off.

- ▶ Do not operate the Torque Control switch while riding.
Stop the motorcycle first and the turn off or on and select the desired level.
- ▶ The Torque Control setting cannot be changed or turned off when the system is activated (Torque Control indicator flashing).

▶ Other than USER mode

Each time the ignition switch is turned to the ON position, the Torque Control level will automatically be set to level 6.

USER mode

Each time the ignition switch is turned to the ON position, the Torque Control level will automatically be set to level it was set to. However, if the level was set to 0 (off), it will become level 1.

▶ Other than USER mode

When the Torque Control is turned from the off position to the on position, it will automatically be set to level 6.

USER mode

When the Torque Control is turned from the off position to the on position, be set to level it was set to.

Torque Control level setting

The level can be selected by pressing the Torque Control switch.

- ▶ Level 7 is the maximum Torque Control level
- ▶ Level 1 is the minimum Torque Control level