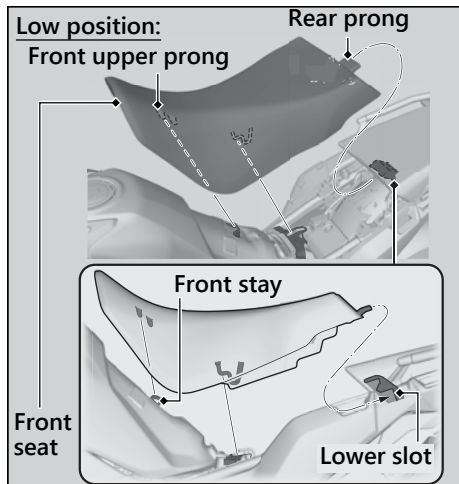


**When setting the low seat position:**

Insert the rear prong into the rear lower slot on the rear carrier.


**2. When setting the high seat position:**

Insert the front lower prong into the front stay.

**When setting the low seat position:**

Insert the front upper prong into the front stay.

**3. Push down on the center of the front seat until it locks in place.**

Make sure that the seat is locked securely in position by pulling it up lightly.

The seat locks automatically when installed. Take care not to lock your key in the compartment under the front seat.