

## ■ Rear Wheel

### Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. **CRF1000D/D II**  
Release the parking brake.
3. **CRF1000A/A II**  
Cover both sides of the rear wheel and brake caliper with protective tape or cloth.  
**CRF1000D/D II**  
Cover both sides of the rear wheel and brake calipers with protective tape or cloth.

