

Instruments *(Continued)*

Silver image display

Side stand indicator


P.64

Riding mode display

P.137

Clock (12-hour or 24-hour display)

To set the clock: P.87

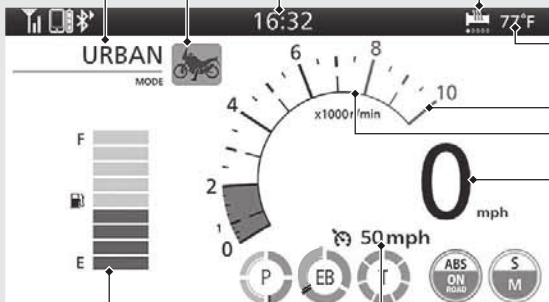

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.



Fuel gauge

Remaining fuel when only E (1st) segment starts flashing:

Approximately 0.95 US gal (3.6 L) CRF1100A/D

Approximately 1.03 US gal (3.9 L) CRF1100A4/D4

If the fuel gauge indicator flashes: P.305