

Instruments *(Continued)*

Honda Selectable Torque Control Level [HSTC]

Display the selected value of the Honda Selectable Torque Control level [HSTC].



Setting range: Level 1 to 7 or 0 (Off)

To select the Honda Selectable Torque Control level [HSTC]: P.129