


Instruments *(Continued)*

- 1 Select [Favorite Information], and then press the **ENT** switch.
- 2 Push the **◀** or **▶** of the **◀▶** sel left/right switch until the desired page is displayed.
- 3 Press **▲** / **▼** to select the available choices, and then press the **ENT** switch.

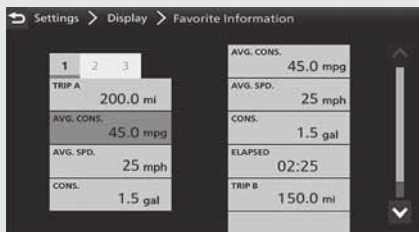

- 4 Press **▲** / **▼** to select the available choices, and then press the **ENT** switch.



- 5 Return to the riding information, previous screen or Home screen. **P.38**
You can also perform the above settings by using the touch screen.