

Cleaning the Crankcase Breather

1. Place a suitable container to receive deposits.
2. Remove the crankcase breather tube plugs from the tubes and drain deposits into the container.
3. Reinstall the crankcase breather tube plugs.

