

Troubleshooting

Engine Will Not Start	P. 299
Overheating (Segment H flashes in coolant temperature gauge)	P. 300
Warning Indicators On or Flashing	P. 301
Low Oil Pressure Indicator	P. 301
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 301
ABS (Anti-lock Brake System) Indicator	P. 302
Torque Control Indicator.....	P. 303
If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 304
Other Warning Indications	P. 305
Fuel Gauge Failure Indication.....	P. 305

Coolant Temperature Gauge Failure Indication	P. 306
Handle Grip Heater Failure Indication	P. 306
Tire Puncture	P. 307
Audio System Trouble	P. 317
Electrical Trouble	P. 330
Battery Goes Dead.....	P. 330
Burned-out Light Bulb	P. 330
Blown Fuse.....	P. 333