


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. 2 P. 200
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - u If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. 2 P. 200
- Make sure engine stop switch is in the  (Run) position. 2 P. 113
- Check for a blown fuse. 2 P. 333
- Check for a loose battery connection (2 P. 248) or battery terminal corrosion (2 P. 236).
- Check the condition of the battery. 2 P. 330

If the problem continues, have your vehicle inspected by your dealer.