

## Removing Wheels

Follow these procedures if you need to remove a wheel in order to repair a puncture.


When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

### Front Wheel

#### Removal

1. Place your vehicle on a firm, level surface.

2. Cover both sides of the front wheel, spoke and brake caliper with protective tape or cloth.

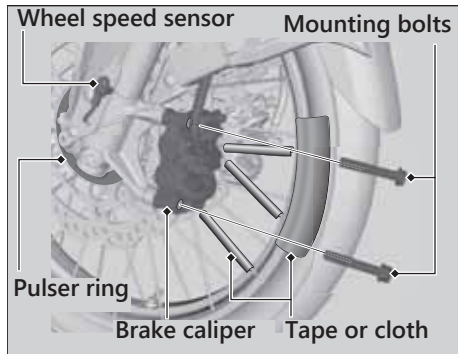

3. On the left side, remove the mounting bolts and remove the brake caliper.