

Instrumentals (Continued)

Battery Voltage [VOLTAGE]


Displays the current battery voltage.
Display range: 7.5 to 18.5 V

1	2	3	4
INST. CONS. 30.0 mpg			
AVG. CONS. 45.0 mpg			
VOLTAGE  12.0 v			
DATE Wed, 15, May, 2019			

When “-.-.-” flashes, have your dealer check for problems.

Date [DATE]

Displays today's date.

1	2	3	4
INST. CONS. 30.0 mpg			
AVG. CONS. 45.0 mpg			
VOLTAGE  12.0 v			
DATE Wed, 15, May, 2019			

To set the current date:  **P.86**