


## ■ Instruments (Continued)

### ■ ABS Function on the Rear Wheel [ABS RR]

Displays the selected status of the ABS function on the rear wheel [ABS RR].

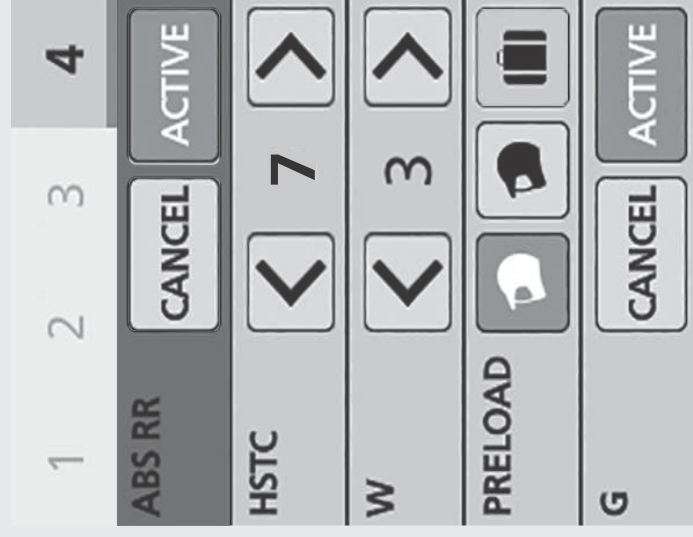

**Available settings:** [ACTIVE]/[CANCEL]  
**Default:** [ACTIVE]

**To select the ABS function on the rear wheel [ABS RR]:** **P.118**