

■ Honda Selectable Torque Control Level [HSTC]

Setting range: Level 1 to 7 or 0 (Off)

[HSTC]

Display the selected value of the Honda Selectable Torque Control level [HSTC].

To select the Honda Selectable Torque Control level [HSTC]:  **P.129**

