


Side Stand Indicator


The side stand indicator comes on when the side stand is put down. It goes off when the side stand is raised.

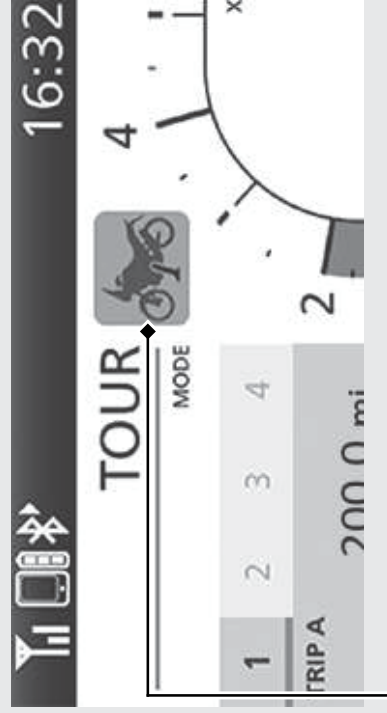

Side stand indicator

Air temperature gauge

Displays the ambient temperature.

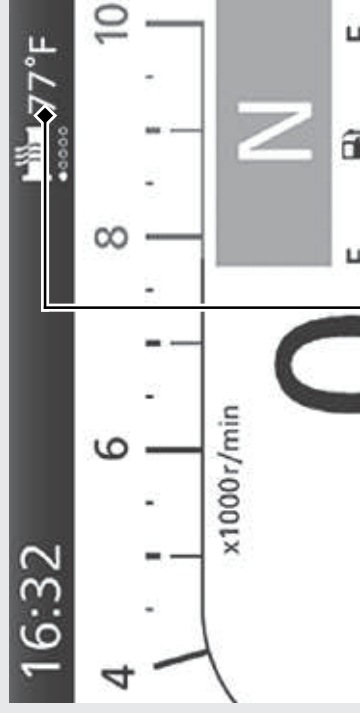

Air temperature gauge