

Instruments (Continued)

To adjust the clock manually:

- 1 Select [Date and Time], and then press the **ENT** switch.
- 2 Select [Adjust Time Automatically], and then press the **ENT** switch to [OFF] (manual) the function.



- 3 Press **◀** / **▶** on the sel **◀** **▶** left/right switch to select a day, month, year, hour, minute or time format section.
 - To advance the day, month, year, hour or minute: Press the **▲** sel up switch, and then press the **ENT** switch until the desired value is displayed.To delay the day, month, year, hour or minute: Press the **▼** sel down switch, and then press the **ENT** switch until the desired value is displayed.
 - ▶ Press and hold the **ENT** switch to advance the figure fast.- To select the time format: Press the **▲** sel up switch or **▼** sel down switch, and then press the **ENT** switch until the desired time format is displayed.