


## Indicators (Continued)

### **Suspension indicator** CRF1100A4/D4

- Comes on when the suspension initialization is waiting.
- Stop your vehicle and wait for a few seconds until the indicator turns off.  
If indicator dose not turn off, contact your dealer.

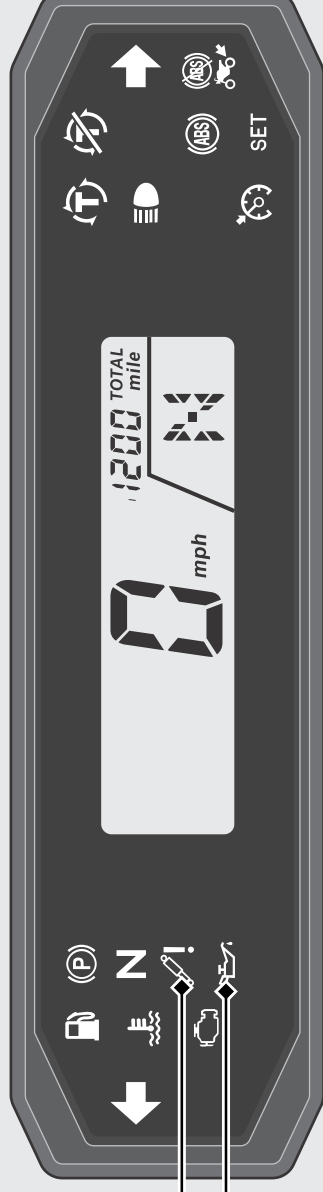

### **Low oil pressure indicator**

- Comes on when the ignition switch is turned to the ON position.
- Goes off when the engine starts.

**If it comes on while engine is running:**  **P.293**