



## Switches (Continued)

### **ENT switch**

Press to set your selection. 

### **Sel up switch**

Press the sel up switch to select the available choices. 



### **Sel left/right switch**

Press the   sel left/right switch in the  /  directions to select the available choices. 



### **Goes back switch**

Goes back to the beginning of the current or previous song or to move rapidly within a track. 



### **Back switch**

Press to return to the previous screen.



### **Skip switch**

Skips to the next song or to move rapidly within a track. 



### **Sel down switch**

Press the sel down switch to select the available choices. 