


To increase the volume: push forward the  function lever.

- ▶ To increase the volume rapidly, push forward and hold the  function lever.
- To decrease the volume: pull backward the  function lever.
- ▶ To decrease the volume rapidly, pull backward and hold the  function lever.

Volume level range:

Other than Microphone: Level 0 to 30
 Microphone: Level 0 to 14

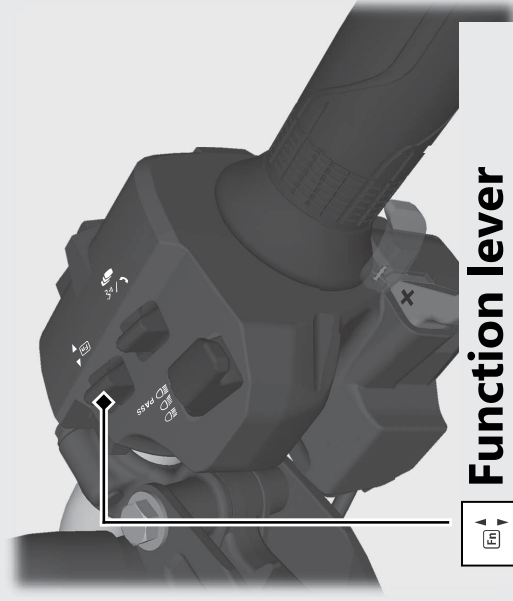

 **Function lever**

Auto Volume

Selects the volume setting to automatically increase volume from the headsets as the speed of the vehicle increases.

To select the Auto Volume:  **P.91**

Available settings: [Off]/[Low]/[High]
Default: [Off]