

## Audio System *(Continued)*

### Ring Tone


If the connected mobile phone supports “in band ring tone”, the ring tone stored on the phone sounds automatically while receiving a call.

If “in band ring tone” is not supported, the ring tone stored in the audio system sounds.

### To Receive a Call

When a call comes in, push forward the  voice control switch on the left handlebar to receive the call.

- The same action can be done by selecting [Answer] on the screen.

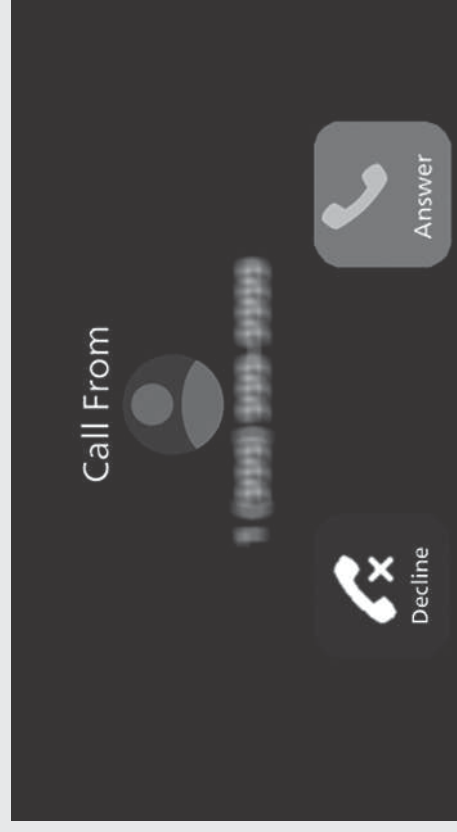

To adjust the phone volume:  **P.91**