


CRF1100A4/D4

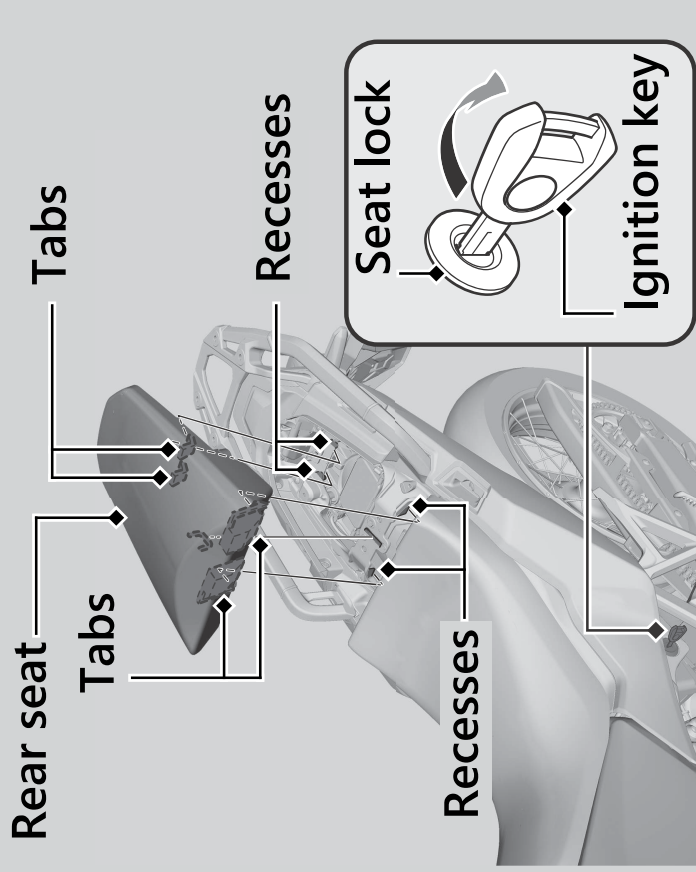

Removal

1. **CRF1100A/D**
Move the seat strap forward.
2. Insert the ignition key into the seat lock.
3. Turn the ignition key clockwise, then push the rear seat forward and up.

Installation

1. Insert the tabs into the recesses.
2. Push down on the front of the rear seat until it locks in place.
 - Make sure that the seat is locked securely in position by pulling it up lightly.

3. **CRF1100A/D**

Move the seat strap to its original position.

The seat locks automatically when closed. Take care not to lock your key in the compartment under the rear seat.