

Clip Removal

Clip removal and installation:


Removal

1. Pull up the center pin to release the lock.
2. Pull out the clip of the hole.

1.




2.

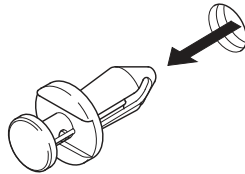

Installation

1. Insert the clip into the hole.
2. Press down the center pin securely to lock the clip.

1.

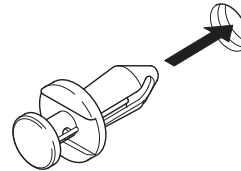

2.

