

# Clip Removal

*Clip removal and installation:*


## Removal

1. Pull up the center pin to release the lock.
2. Pull out the clip of the hole.

1.




2.

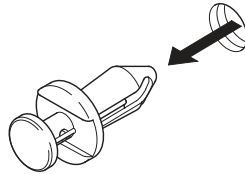

## Installation

1. Insert the clip into the hole.
2. Press down the center pin securely to lock the clip.

1.

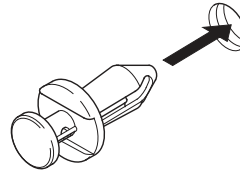

2.

