

Servicing Your Honda

Service Preparations

Maintenance Component Locations	52
Tools	55
Seat Removal	56
Left Side Cover Removal	57

Service Procedures

Fluids & Filters

Fuel	58
Engine Oil	61
Air Cleaner	67
Crankcase Breather	71

Engine

Throttle	72
Clutch System	74
Engine Idle Speed	77
Spark Plug	78
Spark Arrester	80

Chassis

Suspension	82
Brakes	85
Wheels	93
Tires & Tubes	99
Side Stand	103
Drive Chain	104

Electrical

Battery	111
---------------	-----

Appearance Care	116
-----------------------	-----