


Left Side Cover Removal

Refer to *Safety Precautions* on [page 45](#).

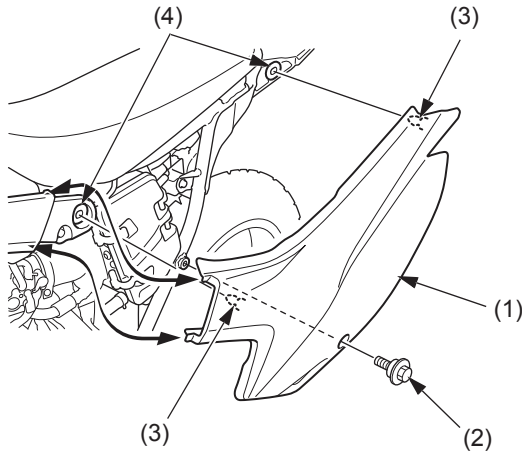

- (1) left side cover (3) prongs
(2) bolt (4) grommets

The left side cover (1) must be removed to service the air cleaner and battery.

Left Side Cover Removal

1. Remove the bolt (2).
2. Pull both side cover prongs (3) out of the rubber grommets (4).

Left Side Cover Installation

1. Slide the top of the side cover under the bottom edge of the seat.
2. Align the side cover prongs with the rubber grommets. Press the side cover into position.
3. Install the securing bolt and tighten it.