


The battery is located in the battery compartment under the seat.

## Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat and left side cover (pages 56, 57).
3. Disconnect the negative (–) terminal lead (1) from the battery first, then disconnect the positive (+) terminal lead (2).
4. Release the battery holder band (3) from the hook.
5. Pull the battery (4) out of the battery compartment.

## UNDER SEAT

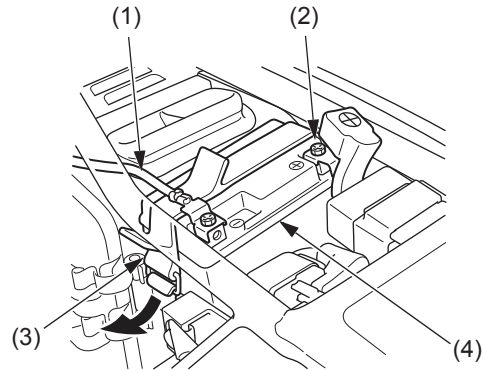

- (1) negative (–) terminal lead
- (2) positive (+) terminal lead
- (3) battery holder band
- (4) battery