

Maintenance Schedule

Items	Frequency	Which ever Comes First ⇒	Initial Maint.	Regular Maint. Interval					Refer to page:	
				mi	100	600	1,200	1,800		2,400
				km	150	1,000	2,000	3,000		4,000
Note	Month	1	6	12	18	24				
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months					104	
	Drive Chain Slider			I	I	I	I	105		
	Brake Fluid	Note 2		I	I	I	I	86		
	Brake Shoes/Pads Wear			I	I	I	I	88,91		
	Brake System		I	I	I	I	I	85		
	Clutch System		I	I	I	I	I	74		
	Side Stand				I		I	103		
*	Suspension				I		I	82		
*	Spark Arrester		C: every 1,000 mi (1,600 km) or every 100 operating hours					80		
*	Nuts, Bolts, Fasteners		I		I		I	–		
**	Wheels/Tires		I	I	I	I	I	93, 99		
**	Steering Head Bearings		I		I		I	–		

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 160).

** In the interest of safety, we recommend these items be serviced only by your dealer.